

# PLE


PLE applications	67
PLE dimensions	68
PLE types	69
PLE sizes	71
PLE parts	72
PLE assembly	73
PLE part numbers	76



closed + open




## APPLICATION AREAS

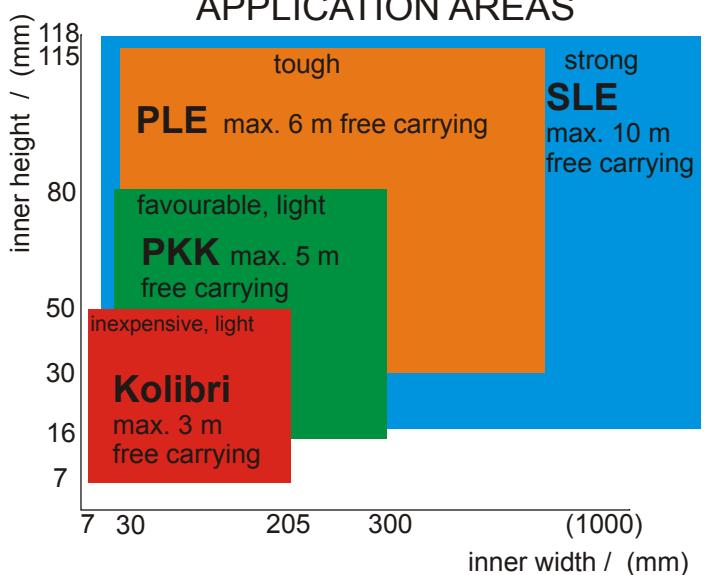

## PLE CHARACTERISTICS

The PLE with aluminum stays is available as **PLE** with plastic inserts or plastic slot profile, as **PLS** with foam slot profile or as **PLP** with plastic divider PZ.

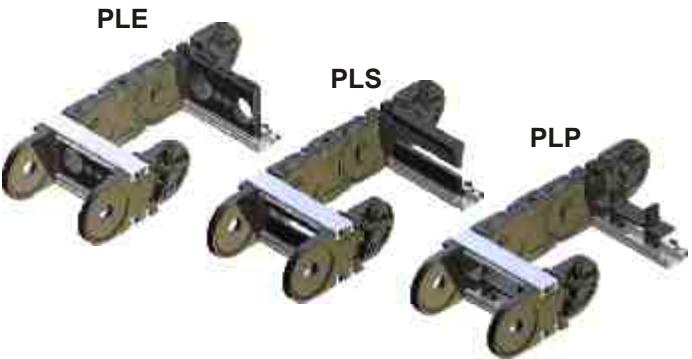

positive stay locking  
both inside and outside radius can be opened  
simple to shorten or lengthen  
stepless stay length up to 1000 mm

All ekd plastic energy chains are equipped with the **integrated connector**. Additional components for mounting the energy chain are not required.

## Travel

The maximum travel is determined by the arrangement and the additional weight (line weight). At normal arrangement the maximum travel is twice the free carrying length. Support rollers or similar constructive steps can increase this value.

In gliding arrangements travel distances up to 100 meters are possible.

Longer travel distances need further constructive steps, like SYSTEM MARATHON, which exceeds the travel distance nearly without limits.

## Travel speed

There are no limits for the travel speed in general. But in gliding applications specific influences have to be taken into account.

## Acceleration

In principle there are no restrictions for the acceleration. Limits can only be achieved at high tension forces caused by high additional weights.

## Temperature



The operating temperature is between -20 ° C and 100 ° C.

## Special versions

ALLROUND  
ATEX  
ESD  
V-0

... all movements  
... EX-protection  
... antistatic  
... self extinguishing



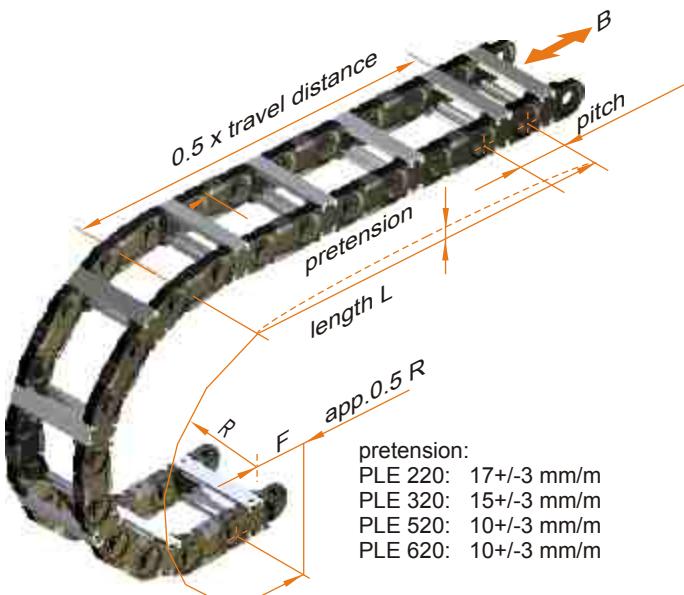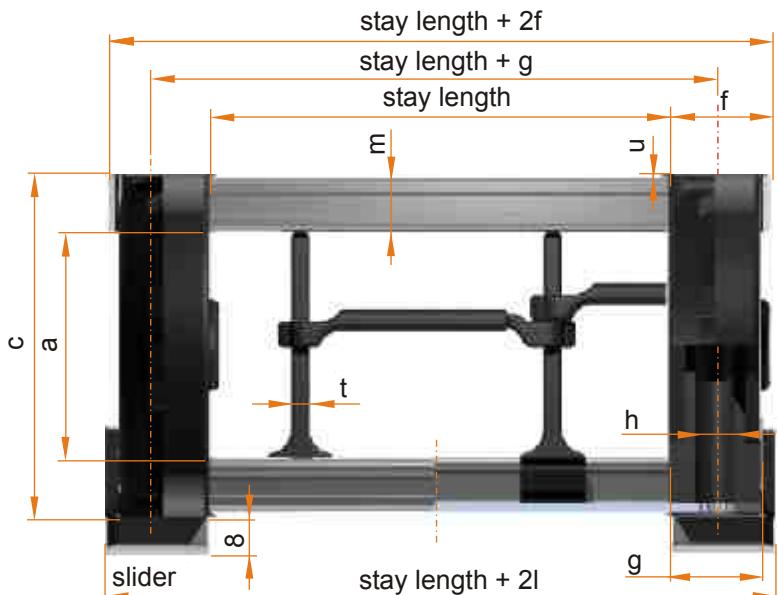

The usable interior width is stay length - 2 mm


PLE	bending radius R [mm]	pitch	a	c	f	g	h	l <sup>1)</sup>	m	t	u	weight [kg/m] <sup>3)</sup>
220, 221	75 100 150 200 300	75	31	50	18	16	Ø6	-	9	4	1	1.9
320, 321, 325, 328 <sup>2)</sup>	150 200 250 300 400	100	49	75	22	20	Ø8	18	12	4	1	3.4 (4.4)
520, 521, 525, 528 <sup>2)</sup>	200 250 300 400 500	125	68	100	26	24	Ø8	21	15	4	1	4.8 (5.9)
541, 548 <sup>2)</sup>	200 250 300 400 500	125	80	100	26	24	Ø8	21	9	4	1	4.60
620, 621	230 300 400 500 700	187	115	150	32	32	Ø10	-	15	8	2	7.20

1) stay length + 2l is the outside width, including sliders 2) PLE 328 from R200, PLE 528, 548 from R250

3) weight with stay length 100, values in brackets for closed version

The stay lengths are offered in steps of 1 mm.

PLE	minimum stay length [mm]	maximum stay length [mm]	PLE inserts Ø [mm]										
			10	15	20	25	30	35	40	45	50	55	
220, 221	50	800	10	15	20	25	30						
320, 321, 325, 328	60	900	10	15	20	25	30	35	40	45	50		
520, 521, 525, 528	70	1000	10	15	20	25	30	35	40	45	50	55	60
541, 548	70	900											
620, 621	90	1000											

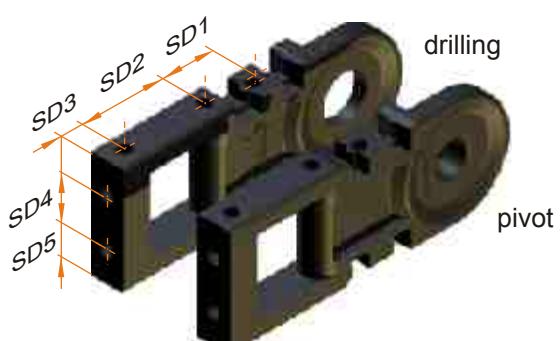

PLE SD- connector	SD1	SD2	SD3	SD4	SD5
220, 221, 225	22,5	37,5	8,5	22	7,5
320, 321, 325, 328	35	45	8,5	45	15
520, 521, 525, 528	35	45	8,5	66	17

order example:


travel distance 3 m, bending radius 200 mm, cable: 1x15 mm, 8x8 mm, 3x12 mm, 2x22 mm,  
chain arrangement is hanging

PLE 320 / 200	x	2325	/ 200	/ SD 32, SD 32 /	h	/ 5 PZ, 1 Pt55
type	/ radius	x	length	/ stay length / connectors	/ arrangement	/ stay distribution

PLE energy chains are distinguished from standard plastic chains by their extreme stability and the rigid, continuously adjustable aluminum profile. Stay lengths up to 1000 mm can be accommodated.


The allocation of the interior offers variable opportunities and guarantees optimum line protection even at high acceleration and travel speed.

The **PLE** (PLE with plastic inserts or plastic insert-profile) ensures a perfect guide at high speeds. Errors during installation of the cables are nearly impossible, with this variation, the hole design of the stays meet exactly the requirements of the lines. Plastic inserts are available in 5 mm steps. The plastic insert-profile can be ordered according to drawing.

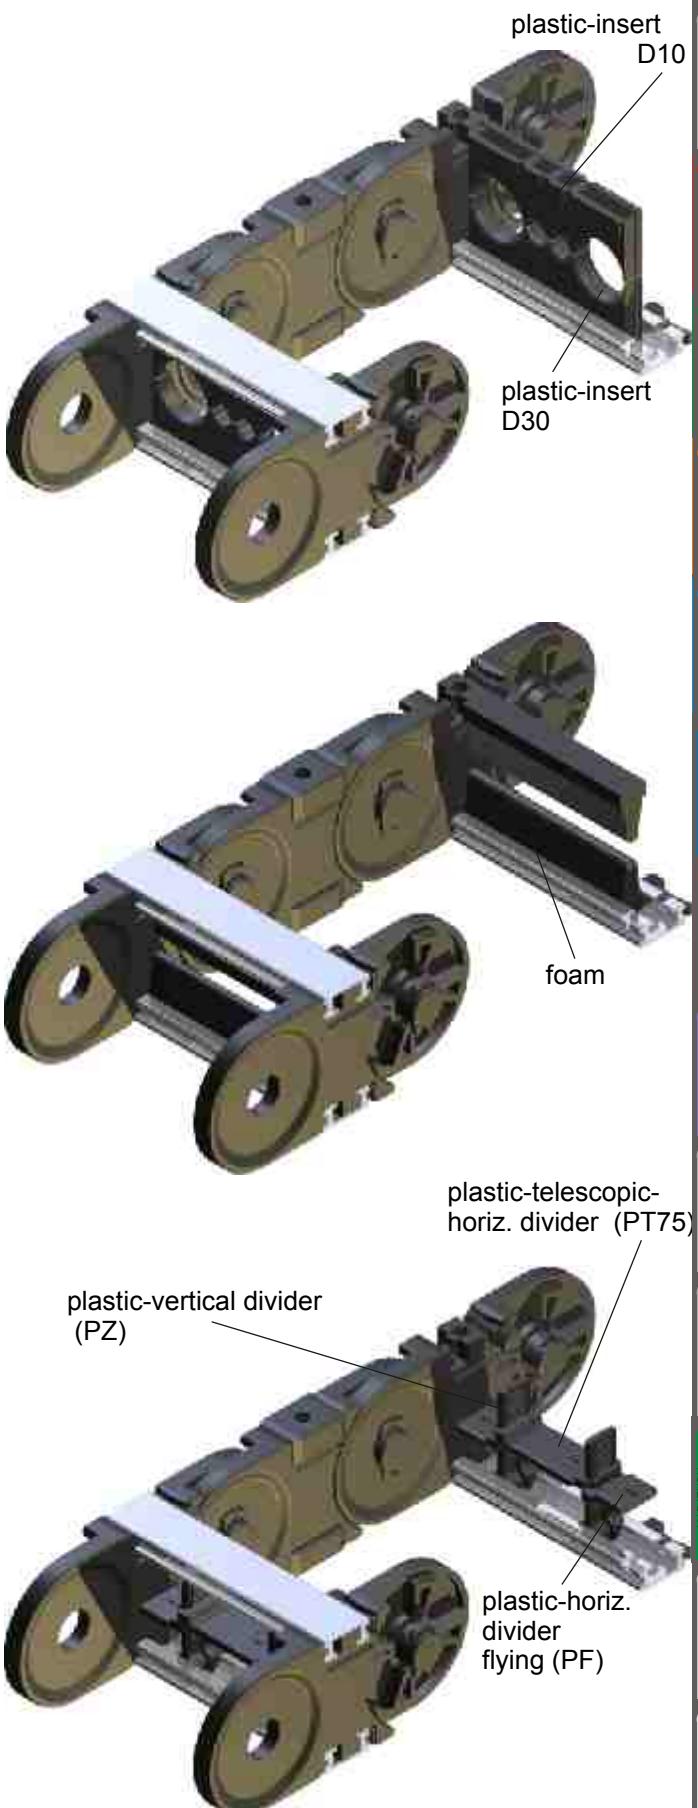

In case of limited installation space, the **PLS** (PLE with foam insert-profile) are used. Again, the optimal guiding of the lines at high speeds and acceleration is ensured. All lines are in the neutral axis (middle of chain height).

For space reasons the **PLP** (PLE with plastic dividers) may be chosen. This inexpensive design allows secure guiding of large amounts of cable. The highly variable stay distribution opportunities through the small steps (3mm) in height and the infinitely adjustable plastic telescopic dividers (PT) allow maximum space for all needs, even when changes in cable diameters are required.

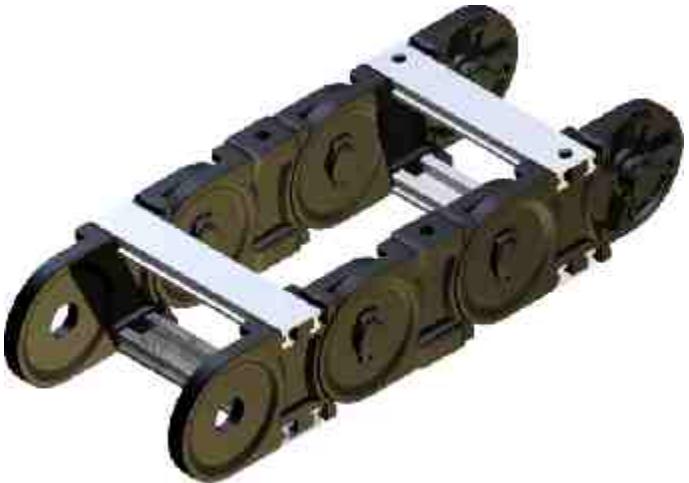


## PLE 220, 320, 520, 620

The standard type is build with stays in every second chain link. The **integrated connector** makes every link in the chain when needed to a connector (*not 620*) and therefore the separate ordering and storage of end connector brackets is not necessary.

order example:

PLE 220	/ 100	x 3525	/ 100
type	radius	length	stay length

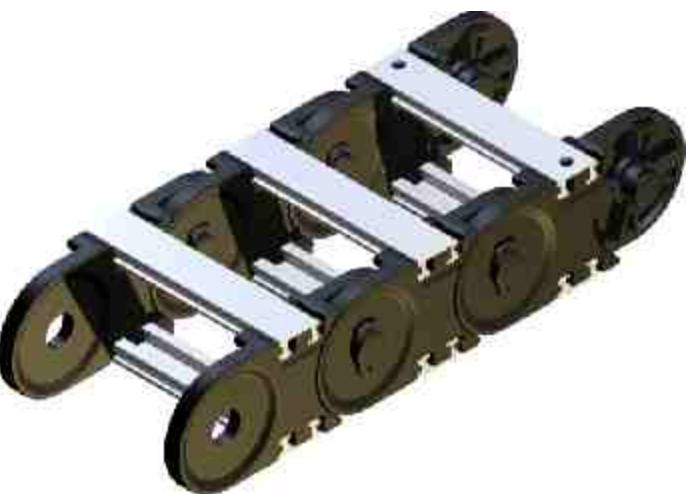


## PLE 221, 321, 521, 541, 621

These designs are made with stays in each link. This increases the lateral stability and improves the guiding particularly of smaller diameter lines.

order example:

PLE 221	/ 100	x 3525	/ 100
type	radius	length	stay length

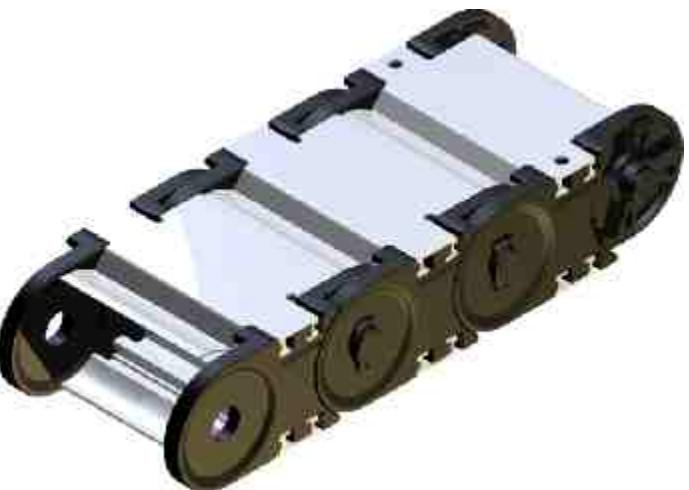


## PLE 325, 525

The closed types with aluminum covers may also replace the standard version stay. The covers can be opened in the inner or outer radius.

order example:

PLE 325	/ 300	x 3500	/ 100
type	radius	length	stay length

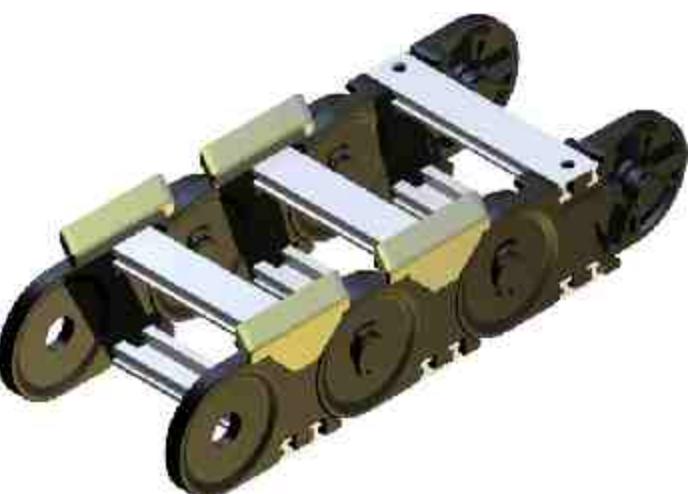

## PLE 328, 528, 548

These types are suitable for long travel, the upper strand slides on the lower strand. For increased stability these energy chains are also build with stays in each link. The energy chains are fitted with sliders in the inner radius, which have a very low coefficient of friction ( $\mu = 0.2$  to  $0.25$ ). After reaching the wear limit, the slider can be renewed and the energy chain will continue. Subsequent slider assembly is also possible. Then, the stays must be provided with drilled location holes.


order example:

PLE 328	/ 200	x 3500	/ 100
type	radius	length	stay length

**PLE 220**


standard type

height: 50      width: 86 ... 836  
 inner height: 31      inner width: 50 ... 800

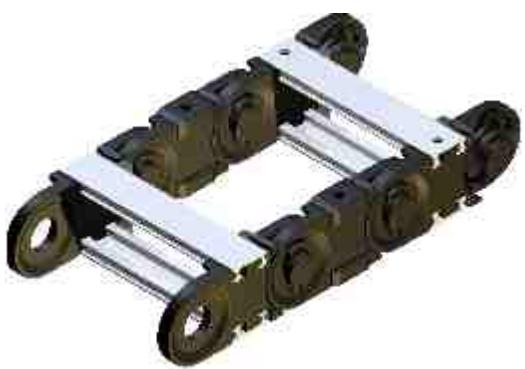**PLE 320**


standard type

height: 75      width: 104 ... 944  
 inner height: 49      inner width: 60 ... 900

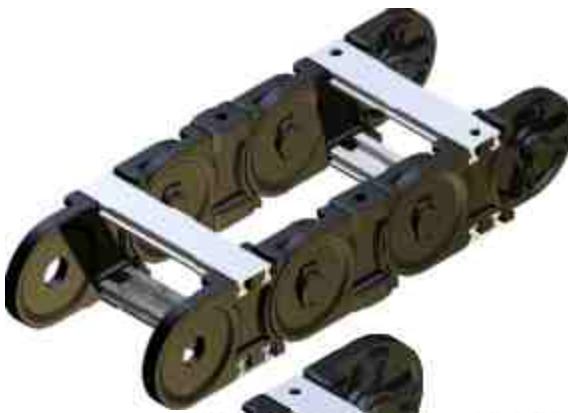**PLE 520**

standard type

height: 100      width: 122 ... 1052  
 inner height: 68      inner width: 70 ... 1000

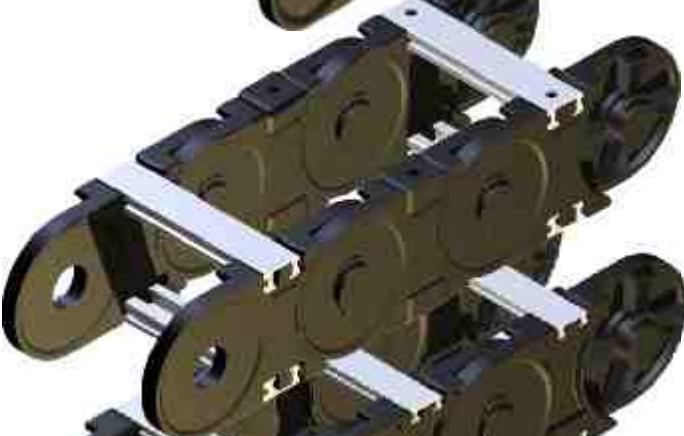**PLE 541**


stay in each link


height: 100      width: 122 ... 1052  
 inner height: 80      inner width: 70 ... 1000

**PLE 620**

standard type


height: 150      width: 154 ... 1064  
 inner height: 115      inner width: 90 ... 1000

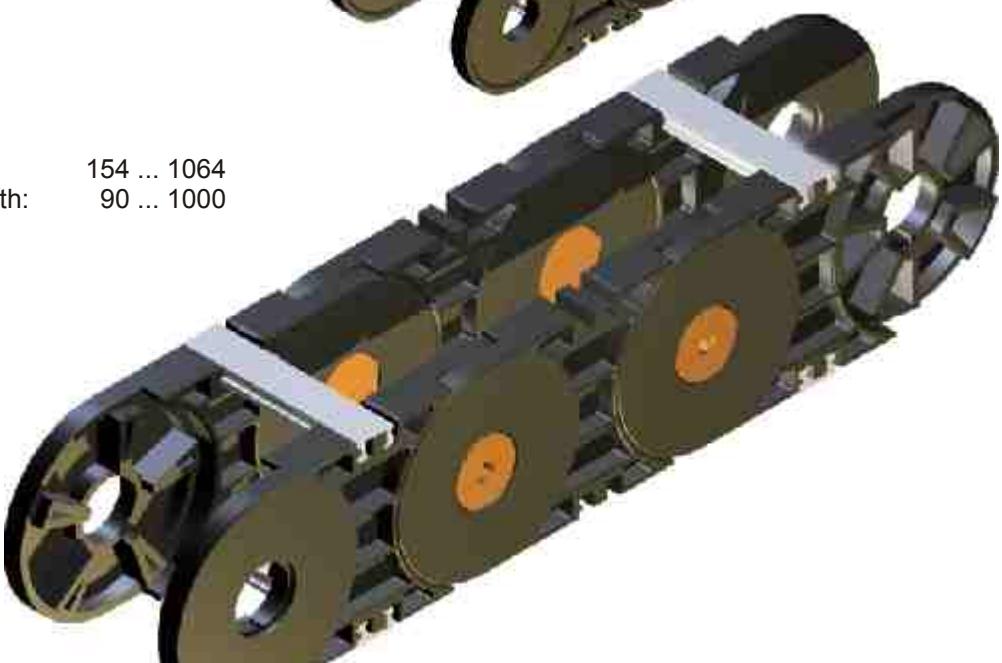

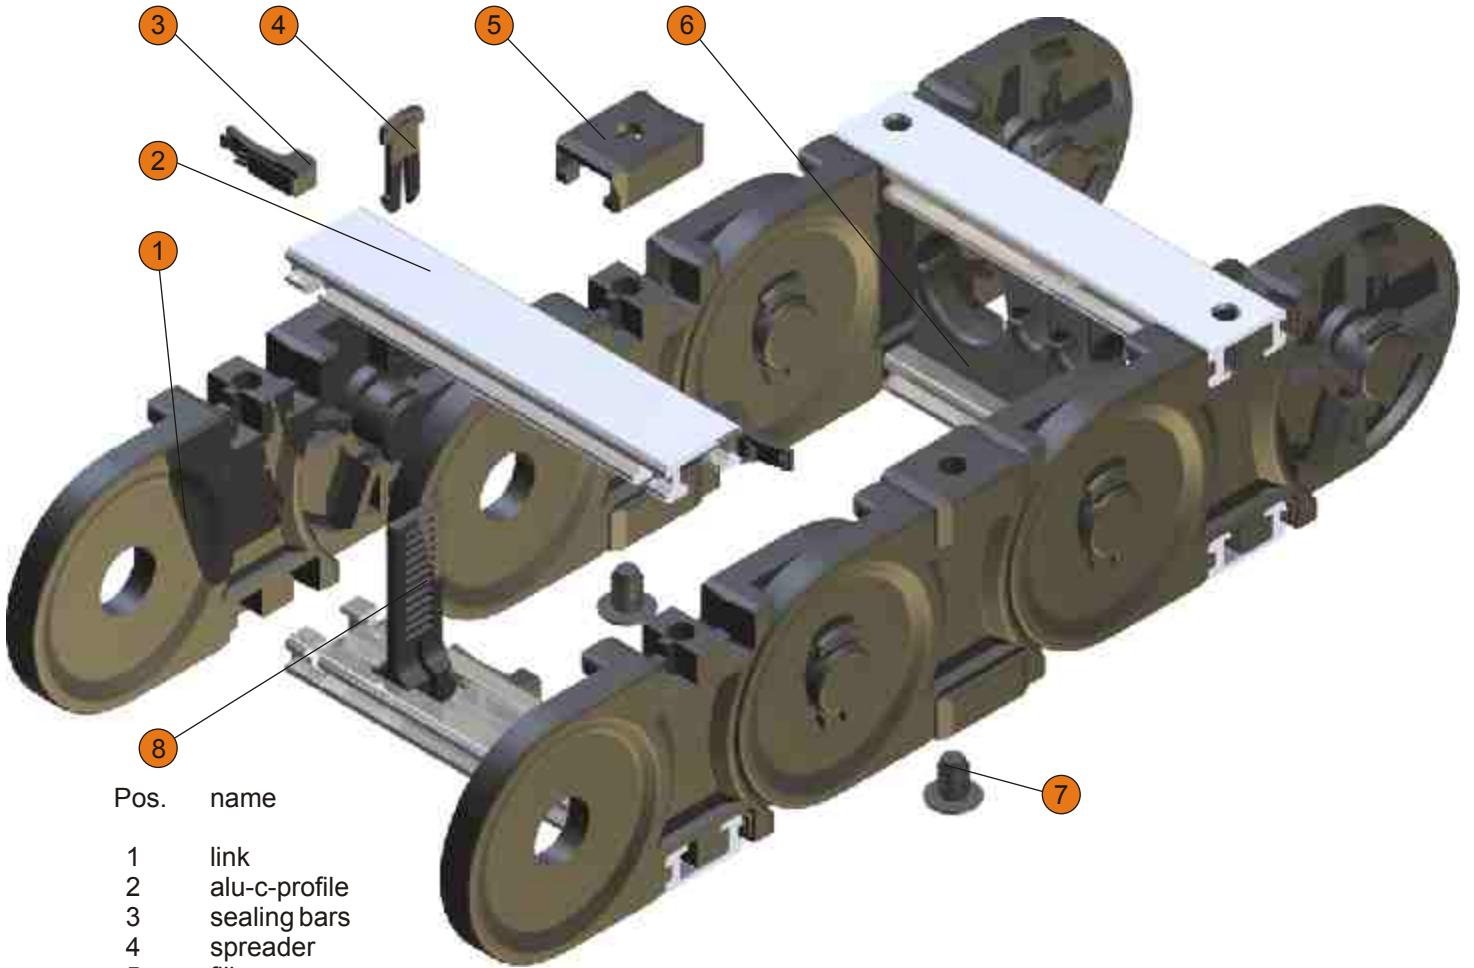

Pos. name


- |    |                               |
|----|-------------------------------|
| 1  | link                          |
| 2  | alu-c-profile                 |
| 3  | sealing bars                  |
| 4  | spreader                      |
| 5  | filler                        |
| 6  | insert                        |
| 7  | damping element               |
| 8  | plastic vertical divider (PZ) |
| 9  | inner cover                   |
| 10 | outer cover                   |

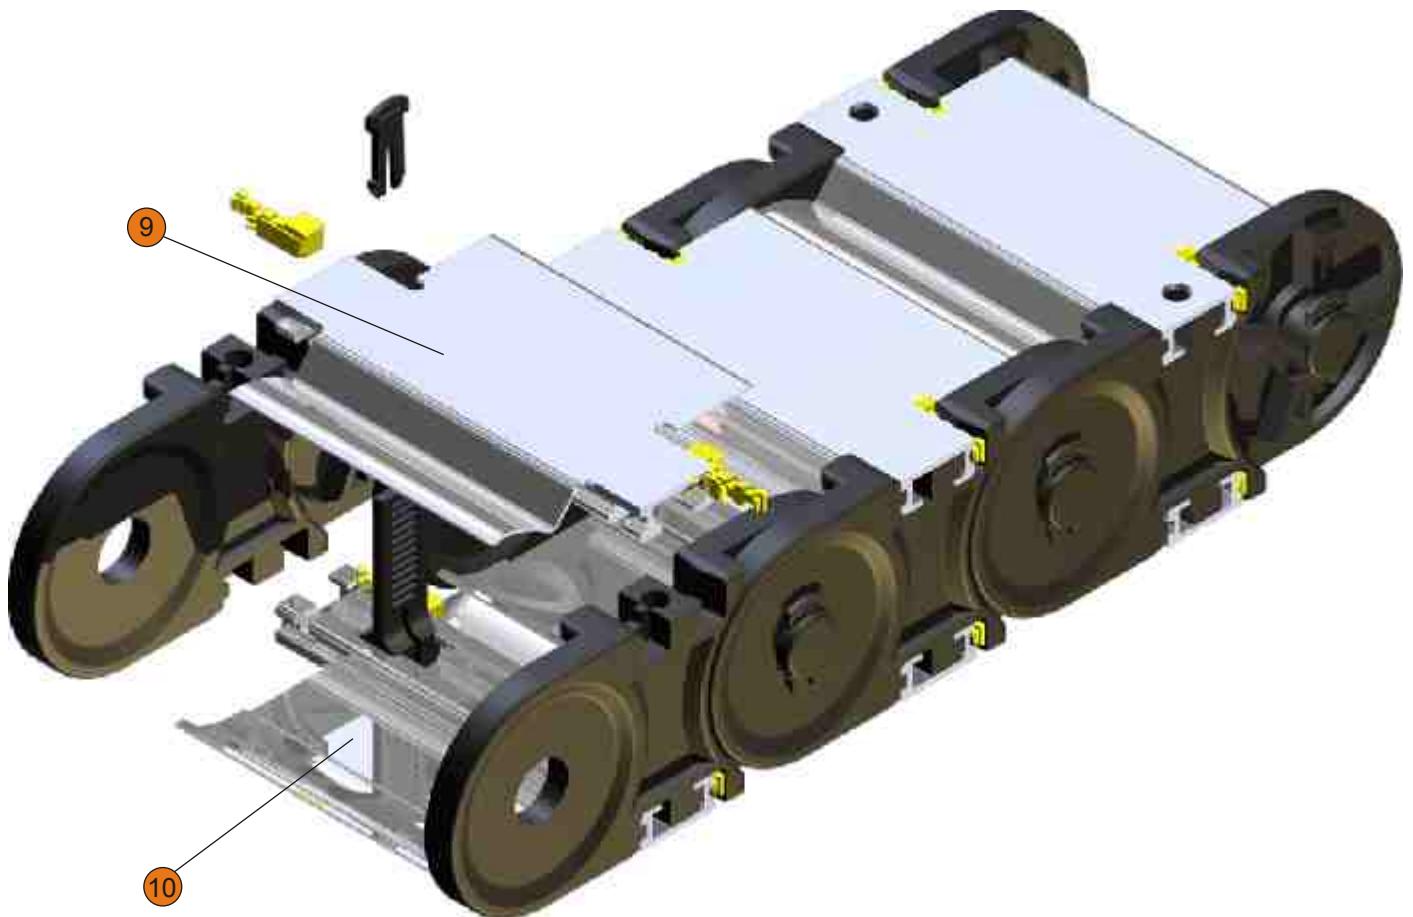

## Lengthening or shortening, link bands


To shorten the spreaders are disengaged (1), taken from (2,3) and the corresponding piece of chain removed (4). Lengthening is done by adding links and inter-lock with the spreaders.

Alternatively, first part of strands assembled or dismantled. Then a stay assembly or disassembly is required.

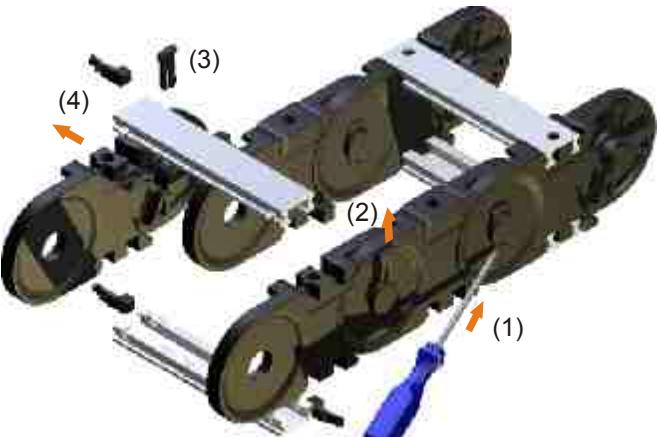


## Stay assembly

Stays are installed (1) and locked by horizontal shifting into place (2). Then pushing the sealing bars outside until they lock the link.

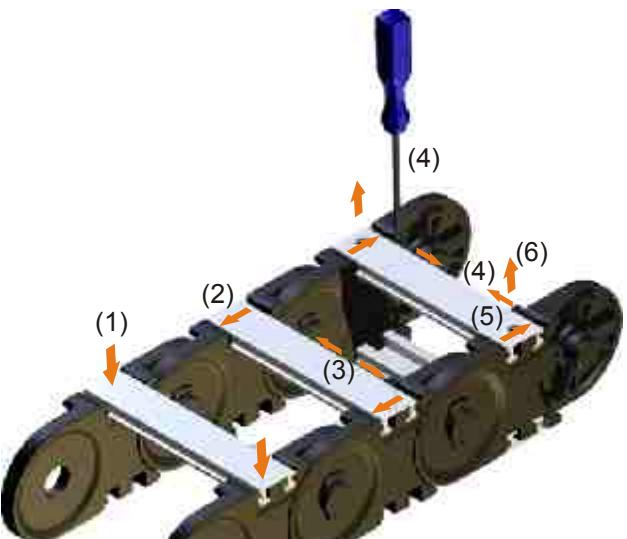

## Stay disassembly


Push sealing bar to the inside (4), unlock stay (5) and remove them (6).

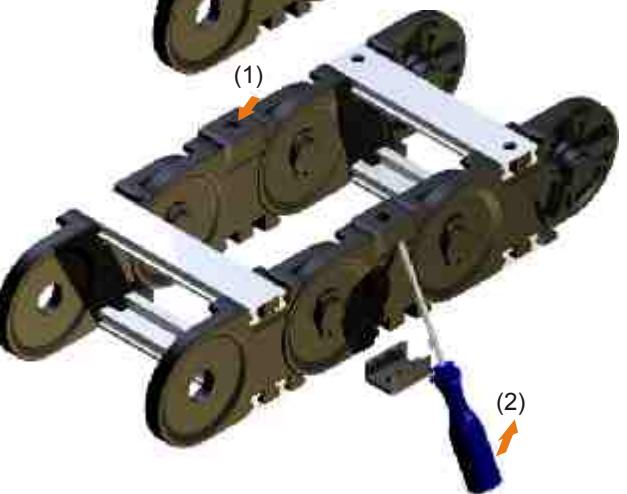

## Filler


The fillers are mounted in the recess and (possibly with a light plastic hammer) pushed until locked (1).

The dismantling of the fillers is done with a screwdriver. The screwdriver blade ought to be small enough to start behind the filler. Then unhinge the filler (2).

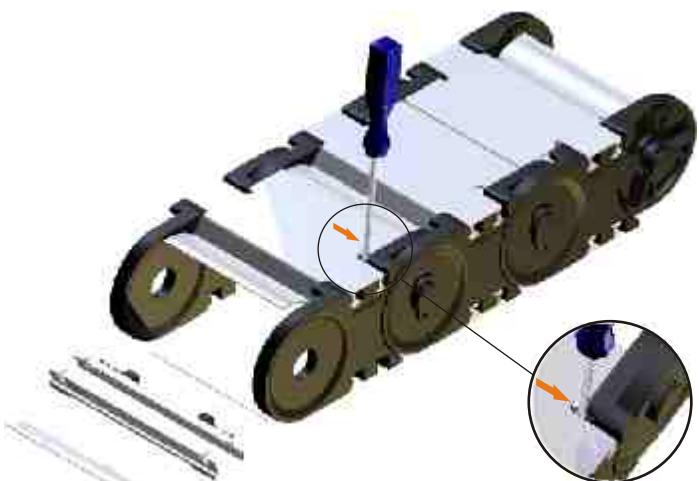


## Covers

The assembly of the covers is the same as the assembly and disassembly of the stays. The sealing bar is positioned in the designated position with a screwdriver.

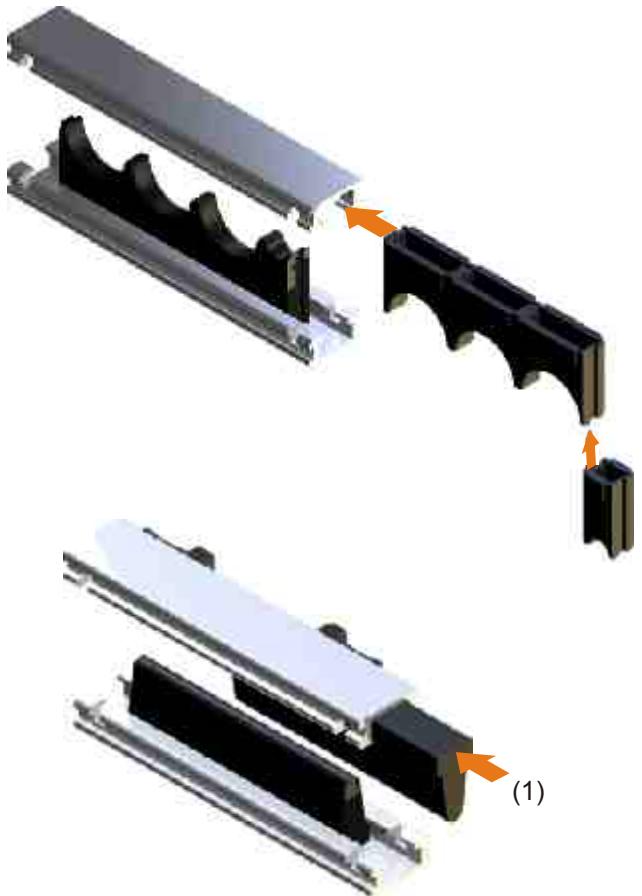

## Plastic inserts

The inserts are assembled according to the required lateral position (1) and inserted into the stay (2).

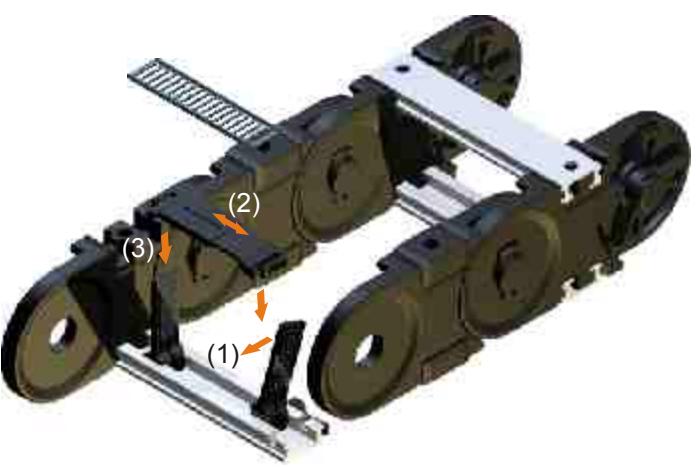

## Plastic divider PZ

The plastic dividers are hooked into the desired position with the long side of the foot in the aluminum bar and engaged with slight pressure (1).

Corrections of the position by lateral displacement are possible. The dismantling of the PZ is done by pulling in the opposite direction or sideways push out from the stay.

## Telescopic horizontal divider


The telescopic horizontal divider can be adjusted in length (2), vertically fitted on the PZ (3) and engaged in the designated height.

The dismantling is carried out with a screwdriver by unlocking and removal.

## Mounting the energy chain


All ekd plastic energy chains are equipped with **integrated connectors**. They allow the mounting of the energy chain with any link.

In gliding energy chain applications or for a smooth optical effect, the mounting holes in the fixed connector can be countersunk.

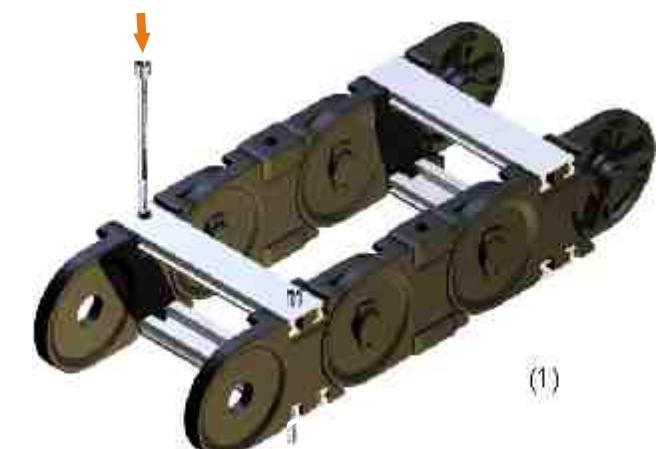

## Face mounting

The energy chain PLE can be optionally fitted with flange connectors. The flange connectors allow various mounting opportunities, mounted like chain links and secured with a stay.

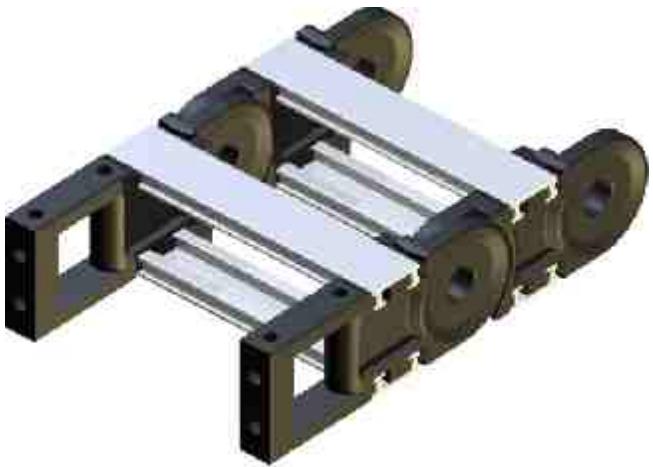


## Sliders


To avoid damage the slider must be conditioned (overnight storage in water at room temperature or 2 h at 80 °C).

The slider is positioned at the inner radius of the energy chain, with the pin in the bore of the stay (1) and pushed until the snap hook locks (2).

To dismantle unhinge the snap hook (3) and remove the slider to the top (4).

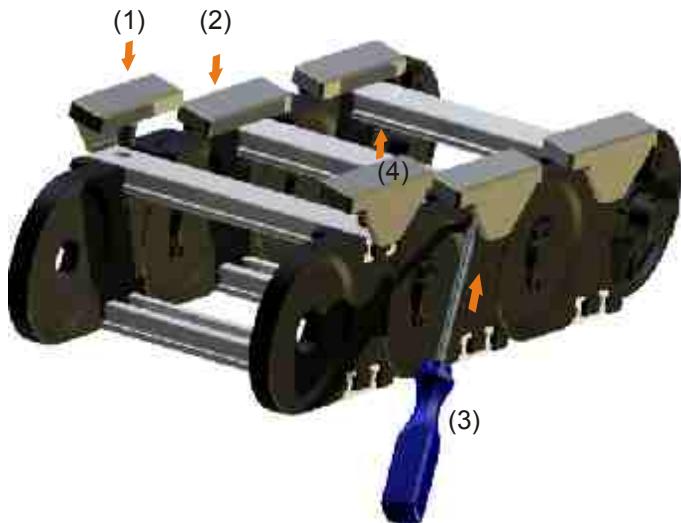

The implementation of an energy chain with sliders has to be done smoothly. In addition, the glide bars (1) should be fitted with contour at the end of the energy chain and counter sinking the connector screws (2). The distance between the glide bar to the first slider should be less than the slider length (3).

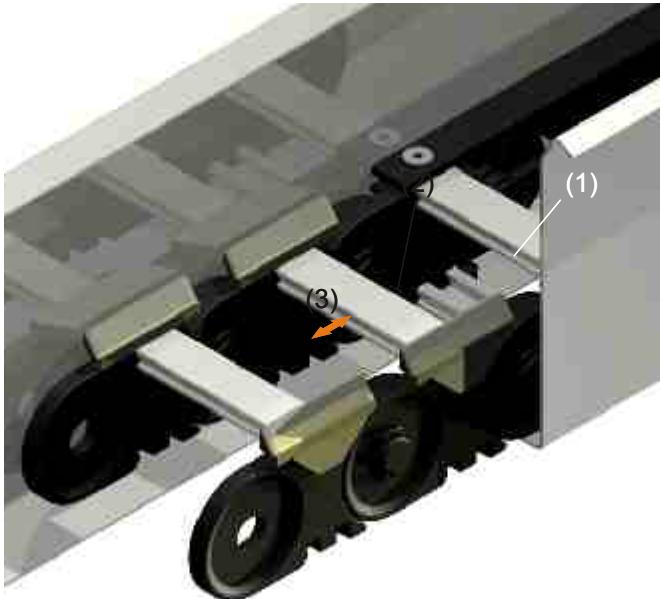

## Maintenance of the energy chain

PLE energy chains are maintenance free. Like every mechanical system this will depend on the ambient conditions so wear will occur which must be observed.

In case of the energy chain has to be replaced.

For long travels or in a circular motion, the energy chains are often equipped with sliding elements. These allow sliding of the upper part of the chain on a suitable surface (eg, slider-slider, slider-steel, glide bar).


The sliders wear depends on the application. The slider surfaces should be checked at regular intervals. With a thickness of 1-2 mm sliders have to be replaced.



	R	75	100	150	200	300
<b>220</b>	m.V.	0346	1190	1219	1191	1192
	o.V.	1193	1194	1218	1195	1196
<b>221</b>	m.V.	0346	1190	1219	1191	1192
	o.V.	1193	1194	1218	1195	1196




	R	150	200	250	300	400
<b>320</b>	m.V.	0351	1197	1198	1199	1200
	o.V.	1201	1202	1203	1204	1205
<b>321</b>	m.V.	0351	1197	1198	1199	1200
	o.V.	1201	1202	1203	1204	1205
<b>325</b>	m.V.	0351	1197	1198	1199	1200
	o.V.	1201	1202	1203	1204	1205
<b>328</b>	m.V.	0351	1197	1198	1199	1200
	o.V.	1201	1202	1203	1204	1205

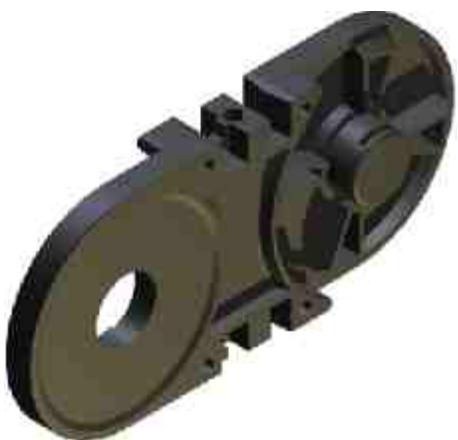

	R	200	250	300	400	500
<b>520</b>	m.V.	0944	1206	1207	1208	1209
	o.V.	1211	1212	1213	1214	1215
<b>521</b>	m.V.	0944	1206	1207	1208	1209
	o.V.	1211	1212	1213	1214	1215
<b>525</b>	m.V.	0944	1206	1207	1208	1209
	o.V.	1211	1212	1213	1214	1215
<b>528</b>	m.V.	0944	1206	1207	1208	1209
	o.V.	1211	1212	1213	1214	1215

R 200 250 300 400 500

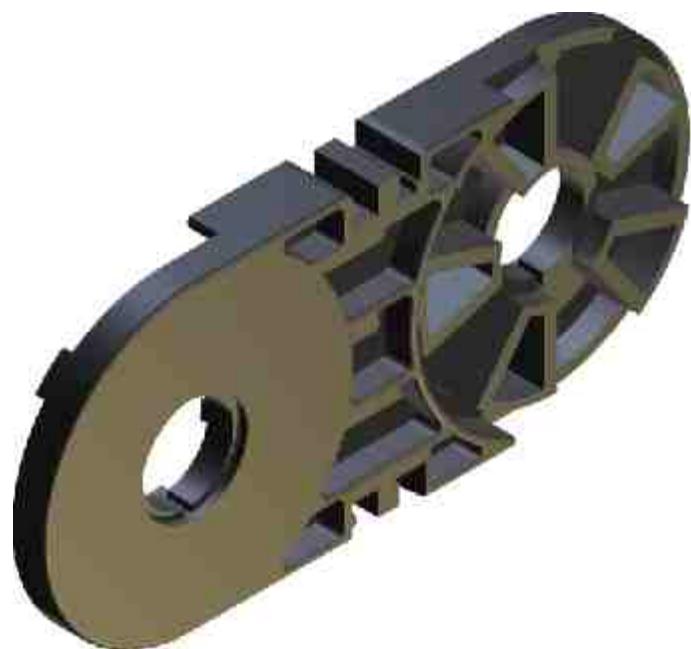


<b>541</b>	m.V.	1611	1607	1608	1609	1610
	o.V.	xxxx	xxxx	xxxx	xxxx	xxxx

<b>548</b>	m.V.	1611	1607	1608	1609	1610
	o.V.	Xxxx	xxxx	xxxx	xxxx	xxxx

R 230 300 400 500 700

<b>620</b>	m.V.	1104	1100	1101	1102	1103
	o.V.	-	-	-	-	-
<b>621</b>	m.V.	1104	1100	1101	1102	1103
	o.V.	-	-	-	-	-

# PLE PART NUMBERS

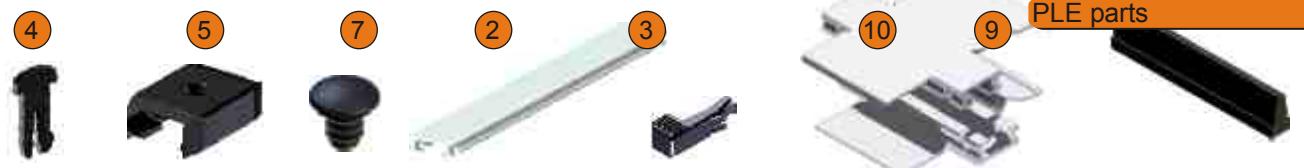

PLE parts

72

PLE parts

72

8



PLE	PZ	PTF	PT 55	PT 75	LL 25	LL 50	LS	GL	SDA	Drilling	Pin
-----	----	-----	-------	-------	-------	-------	----	----	-----	----------	-----

220	0778	1519	0879	0879	0880		1663		1664		1421	-	1439 1761
-----	------	------	------	------	------	--	------	--	------	--	------	---	-----------

221	0778	1519	0879	0879	0880		1663		1664		1421	-	1439 1761
-----	------	------	------	------	------	--	------	--	------	--	------	---	-----------



320	0163 1678	0879	0879	0880		1663		1664		1421	-	1773 1774
-----	-----------	------	------	------	--	------	--	------	--	------	---	-----------

321	0163 1678	0879	0879	0880		1663		1664		1421	-	1773 1774
-----	-----------	------	------	------	--	------	--	------	--	------	---	-----------

325	0163 1678	0879	0879	0880		1663		1664		1421	1450	1773 1774
-----	-----------	------	------	------	--	------	--	------	--	------	------	-----------

328	0163 1678	0879	0879	0880		1663		1664		1421	1450	1773 1774
-----	-----------	------	------	------	--	------	--	------	--	------	------	-----------



520	0719 1680	0879	0879	0880		1663		1664		1421	-	1775 1776
-----	-----------	------	------	------	--	------	--	------	--	------	---	-----------

521	0719 1680	0879	0879	0880		1663		1664		1421	-	1775 1776
-----	-----------	------	------	------	--	------	--	------	--	------	---	-----------

525	0719 1680	0879	0879	0880		1663		1664		1421	1449	1775 1776
-----	-----------	------	------	------	--	------	--	------	--	------	------	-----------

528	0719 1680	0879	0879	0880		1663		1664		1421	1449	1775 1776
-----	-----------	------	------	------	--	------	--	------	--	------	------	-----------




541	1613		0879	0879	0880		1663		1664		1421	-	
-----	------	--	------	------	------	--	------	--	------	--	------	---	--

548	1613		0879	0879	0880		1663		1664		1421	1449	
-----	------	--	------	------	------	--	------	--	------	--	------	------	--



620	1257 1110	-	-	-	-		-	-	-	-	-	-	
-----	-----------	---	---	---	---	--	---	---	---	---	---	---	--

621	1257 1110	-	-	-	-		-	-	-	-	-	-	
-----	-----------	---	---	---	---	--	---	---	---	---	---	---	--

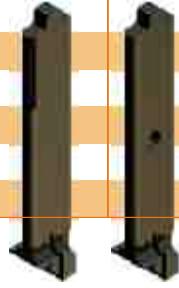

# PLE PART NUMBERS

## inserts

6

PLE		diameter in mm												
		10	15	20	25	30	35	40	45	50	55	60	65	70
220		649	650	651	652	653	-	-	-	-	-	-	-	-
221		649	650	651	652	653	-	-	-	-	-	-	-	-
														
320		654	665	656	657	658	659	660	661	662	-	-	-	-
321		654	665	656	657	658	659	660	661	662	-	-	-	-
325		654	665	656	657	658	659	660	661	662	-	-	-	-
328		654	665	656	657	658	659	660	661	662	-	-	-	-
														
520		1628	663	664	665	666	667	668	669	670	671	672	714	715
521		1628	663	664	665	666	667	668	669	670	671	672	714	715
525		1628	663	664	665	666	667	668	669	670	671	672	714	715
528		1628	663	664	665	666	667	668	669	670	671	672	714	715
														
541		-	-	-	-	-	-	-	-	-	-	-	-	-
548		-	-	-	-	-	-	-	-	-	-	-	-	-
														
620		-	-	-	-	-	-	-	-	-	-	-	-	-
621		-	-	-	-	-	-	-	-	-	-	-	-	-
														